AFCO Installation & Operation Instructions

Model #AF 950721 •Portable 20 Gallon 305 4-Way Fogger

REQUIREMENTS

Ready-to-Use Chemical Solution

Compressed Air	29.5 CFM @ 80 PSI	
Minimum Air Supply Line	1/2"	

OPTIONS

Optional Check Valves to Keep Tubes Primed Check Valve, Chemical, PP(W), 1/4" (EPDM) # 491401

For Lighter Fog Use Metering Tips (4 Sets)Metering Tips-Color Coded (10 Smallest)# 443794

WEIGHT & DIMENSIONS

Shipping Weight: 66 lbs.

Shipping Dimensions: 48" x 26" x 24"





READ ALL INSTRUCTIONS BEFORE USING EQUIPMENT!

(j) Overview

The Portable 20 Gallon 305 4-Way Fogger is a chemical atomizer that uses compressed air (29.5 CFM @ 80 PSI) and venturi action to draw ready-to-use chemical solution from the tank on the all stainless steel cart. It atomizes the solution and projects it as light, "damp" fog particles in 4 directions up to 25 feet. This unit features a telescoping mast and can also be used as a 2-Way fogger.

AFCO • 5000 Letterkenny Rd • Chambersburg, PA. 17201 • 1-800-345-1329

AF 950721 • Portable 20 Gallon 305 4-Way Fogger

1 Safety & Operational Precautions

- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear proper respiratory protection, protective clothing, gloves and eye-wear when working with chemicals.
- Always direct the discharge away from electrical devices.
- Follow the chemical manufacturer's safe handling instructions.
- NEVER fog flammable materials through the fogger.
- SPECIAL CAUTION: This fogger atomizes chemical into the air. Ensure that the area to be fogged has been evacuated of all people without proper respiratory protection!
- 1. Unpack and connect the 4-way fogger head to the nipples and through the slide brackets as shown in the drawing
- 2. Push the pick up tubes over the 4 blue metering tip holders. Make sure to place the same tube on the 2 foggers with the ball valves. This allows the unit to be used as a 2 way.
- 3. Use a container with enough water for doing some test runs to familiarize yourself with the fogger before running chemicals through it. This will help you determine the best placement for the best coverage.
- 4. Place the fogger in the center of the test area to be fogged.
- 5. Place the 2 pick up tubes/strainers in the water.
- 6. Connect a 1/2" minimum air line to the fogger that has a shut off valve on the opposite end where the fogger can be turned on and off at a distance. Wear ear protection.
- 7. Loosen the anchor bolts on the slide brackets and raise the 4-way fogger assembly to preferred height, and tighten the bolts to secure.
- 8. Move away from the fogger and turn on your air supply, observe the foggers performance. The fog should be consistent and uniform. If it is sputtering and inconsistent you may need to partially close your airline ball valve to fine tune the air volume/pressure.
- 9. For certain applications the foggers may produce more volume than needed. If fog is too dense, optional metering tips are available for restricting the solution volume to produce a lighter fog
- 10. Observe the coverage, you may have to move the fogger a time or two for best coverage. Once you are familiar with coverage and operation and air flow adjustments you are ready to fog.

TO OPERATE

SPECIAL CAUTION: This fogger atomizes chemical into the air. Ensure that the chemical is safe to be around or the area to be fogged has been evacuated of all people and/or animals before starting fogging. Upon completion of fogging, ensure that sufficient time has elapsed for all the fog to have dissipated before returning to the area without proper respiratory protection.

- 1. Fill a 5 gallon pail with the desired amount of ready to use solution you want to "fog" and place the tubes in the chemical solution.
- 2. Place the fogger in the center of the area to be fogged.
- 3. Loosen the anchor bolts on the slide brackets and raise the 4-way fogger assembly to preferred height, and tighten the bolts to secure.
- 4. Connect your 1/2" minimum air line to the fogger do not turn on!!
- 5. Make sure you are out of the area to be fogged and turn on your air supply. Adjust airline ball valve if needed based on your testing with water.
- 6. For certain applications the foggers may produce more volume than needed. If fog is too dense, <u>optional</u> metering tips are available for restricting the solution volume to produce a lighter fog
- 7. Fogger will continue to run until the air supply is manually turned off.
- 8. Depending on the application, you will have to experiment with the amount of time and solution required to achieve the desired results.
- 9. Turn air supply off when finished. Do NOT re enter room without proper respiratory protection until fog dissipates.

Portable 4-Way 455 Fogger

Produce small fog particles and project a fine, "dry" fog up to 35 feet.

COMPRESSED AIR


MODEL	60 PSI	80 PSI	
4 -WAY	54.0	70.0	

CHEMICAL SOLUTION DRAW RATE

Average ounces of chemical solution per minute the fogger will draw

Mounted:

invantea.		
80" ABOVE CHEM	41.0	48.0
65" ABOVE CHEM	47.0	52.0

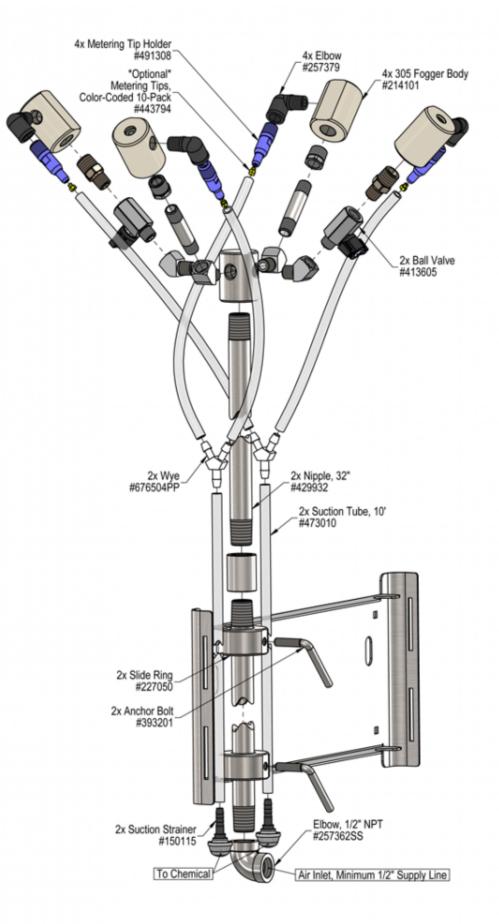

Troubleshooting Guide

AF 950721 • Portable 20 Gallon 305 4-Way Fogger

Ducklaus	Possible Cause / Solution	
Problem	Startup Maintenance	
,	1, 2, 3, 4 6, 7, 8, 9 1, 5	
Possible Cau	ise / Solution	
Startup	Maintenance	
 Air line too small, not enough air pressure or volume See REQUIREMENTS, page 1. 	6. Pin hole or cut in suction tube• Replace suction tube.	
 Air pressure too high. Slightly close the air supply valve to lower the pressure by lowering the volume till the fogger smooths out. 	 7. Chemical strainer clogged up Clean or replace 8. Metering tip or metering tip holder clogged 	
 3. Fogger too high to draw chemical, 12' maximum • Raise the level of the chemical 	• Clean or replace metering tip and/or metering tip holder.	
 Chemical tube kinked or not immersed in chemical or chemical depleted. Straighten tube / replenish chemical 	 9. Debris clogging the fogger inlet jets Disconnect air supply, remove fogger bodies and visually inspect; remove debris from fogger inlet. 	
 Drawing too much solution Order and install optional metering tip or needle valve (needle valve 4 & 8-Way only). 		

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

32