AFCO Installation & Operation Instructions

Model #AF 976500 ◆Timed Entryway Foam Sanitizer

REQUIREMENTS

Chemical Concentrate

Water:	
Tempera	

up to 160°F iture Pressure 35-125 PSI 1.34 GPM @ 40 PSI Flow Supply Line 1/2" Min

up to 3 CFM **Compressed Air**

3/4" ID, up to 40' Hose/Pipe

Nozzle **Entryway Spreader**

Electric 120V

OPTIONS

Jug Rack, SS, 1 Gallon, Round/Square # 224200 Jug Rack, SS, 2 1/2 Gallon # 224210 Jug Rack, SS, 5 Gallon # 224215

Dual Pick-up Assembly

Entryway Dual Chemical Pick-up Assembly # 976012


Alternate Check Valve - Viton Standard

Check Valve, Chemical, PP, 1/4" (EPDM) # 491401

WEIGHT & DIMENSIONS

Shipping Weight: 20 lbs.

Shipping Dimensions: 22" x 19" x 9"

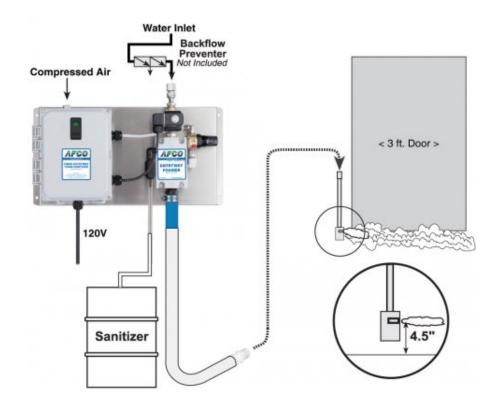



READ ALL INSTRUCTIONS BEFORE USING EQUIPMENT!



Overview

The Timed Entryway Foam Sanitizer is an automated foam applicator for projecting sanitizing chemicals on to floors of 3' wide employee walk doors to prevent cross contamination. When activated, this venturi injection system uses city water pressure (35 - 125 PSI) to draw and blend chemical concentrate into the water stream to create an accurately diluted solution. Rich, clinging foam is created by injecting compressed air into the solution to greatly increase volume and coverage ability. Foam is then projected through the discharge hose and Spreader™ nozzle. The system timer is user-programmable to meet the needs of any facility.



Safety & Operational Precautions

- When connecting to a potable water supply follow all local codes for backflow prevention.
- Always consider electrical shock hazard when working with and handling electrical equipment. If uncertain, consult an Electrician. Electrical wiring should only be done by a qualified Electrician.
- For proper performance do NOT modify, substitute nozzle, hose diameter or electrical control box.
- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear protective clothing, gloves and eye wear when working with chemicals.
- Always direct the discharge away from people and electrical devices.
- Follow the chemical manufacturer's safe handling instructions.
- NEVER mix chemicals without first consulting chemical manufacturer.
- Disconnect electrical power to the control box prior to opening it.

TO INSTALL (REFER TO DIAGRAM, NEXT PAGE.)

- 1. Mount the unit to a suitable surface above chemical supply to prevent siphoning.
- 2. See Page 1 for proper installation layout.
- 3. You can use either the section of hose to connect the foamer to 3/4" pipe or use 3/4" ID pipe only. Use as few elbows as possible. Minimum length of the total hose/pipe is 25'.
- 4. Connect and mount the spreader nozzle slot at around 4-5" off the floor.
- 5. Connect water and compressed air to the unit.

Set the chemical dilution ratio by threading one of the color coded metering tips into each chemical check valve. See chemical labels for dilution ratio recommendation or consult your chemical supplier.

- For the strongest dilution ratio do NOT install a colored metering tip.
- The dilution ratios in the metering tip chart are based on water thin chemicals with a viscosity of 1CPS.
- Thicker chemicals will require a larger tip than the ratios shown in the chart.
- Application results will ultimately determine final tip color.
- Select the tip color that is closest to your desired chemical strength and thread it into the tip holder. DO NOT OVER TIGHTEN.
- Push the chemical tube over the check valve barb and place the strainer in the chemical concentrate.

TO OPERATE

TO TEST

- 1. Plug the power cord into 120 VAC outlet.
- 2. The unit has been tested and the timer is preset to run for 60 seconds to allow for final adjustments. (ON TIME will activate first.) Open your water supply valve and your air supply valve, and then turn on the power switch.
- 3. The unit will activate.
- 4. Final chemical dilution and air adjustments will now have to be made.
- 5. Wait a few seconds and observe foam consistency.
 - Use the least amount of air needed to achieve good foam quality to prevent water pressure fluctuations from affecting performance. Air pressure must be kept lower than water pressure.
 - To adjust foam consistency pull out on the air regulator knob, turn slightly clockwise for dryer foam and counterclockwise for wetter foam. Wait a few seconds to see each adjustment.
 - You may also have to try different sized metering tips and air settings until foam consistency is acceptable.
 Once this is set and desired foam consistency is achieved push lock the knob. You are ready to start.

TIMER ADJUSTMENT

1. CAUTION! UNPLUG THE POWER CORD! Then open control box and adjust the timer. The ON TIME dip switches control how long the foam will be applied. The OFF TIME dip switches control how long the unit will stay off between foam applications. Add up the seconds for each activated dip switch to arrive at the desired duration of the ON cycle. Usually 8-10 seconds is sufficient to foam the floor (longer plumbing runs will require a longer application cycle). Add up the minutes for each activated dip switch to arrive at the desired duration of the OFF cycle. Set your OFF TIME to maintain the foam's presence according to your flow (anywhere from 6 to 15 minutes).

Brown .56 306:1 Clear .88 195:1 Bright Purple 1.38 124:1 White 2.15 80:1 Pink 2.93 59:1 3.84 Corn Yellow 45:1 Dark Green 4.88 35:1 5 77 30:1 Orange Gray 6.01 29:1 7.01 Light Green 24:1 8.06 Med. Green 21:1 Clear Pink 9.43 18:1 11.50 Yellow Green 15:1 Burgundy 11.93 14:1 Pale Pink 13.87 12:1 15.14 Light Blue 11:1 Dark Purple 17.88 10:1 Navy Blue 25.36 7:1 Clear Aqua 28.60 Black 50.00 No Tip Ratio up to 6.0:1

Metering Tip Selection Chart

Meterina

Tip Color

Oz. per

Min.

Example:

Dilution

Ratio @ 40

PSI

The dilution ratios above are approximate values. Due to chemical viscosity, actual dilution ratios may vary.

Metering Tip Selection Formula


(GPM x 128) / Dilution Ratio = Oz. per Min

Flow Rate Chart			
Pressure	Flow Rate		
PSI	GPM		
40	1.34		
50	1.50		
60	1.64		
70	1.77		
80	1.90		
90	2.01		
100	2.12		
110	2.22		
120	2.32		

- 2. Close control box and plug in the power cord. Turn on the power switch. The unit will now function according to the timer settings. (ON TIME will activate first.)
 - Note: The unit will run 24 hours a day unless the power switch is manually turned off.
 - For extra foam at any time, press and hold the lower end (Momentary control) of the door switch. (See Switch Settings, below.)

SWITCH SETTINGS

- Automatic control Top of switch is depressed. Green light glows.
- OFF Switch is in middle position; green light is off
- Momentary control Press bottom of switch. Unit is active only while switch is pressed. When released, the switch returns to the OFF position.

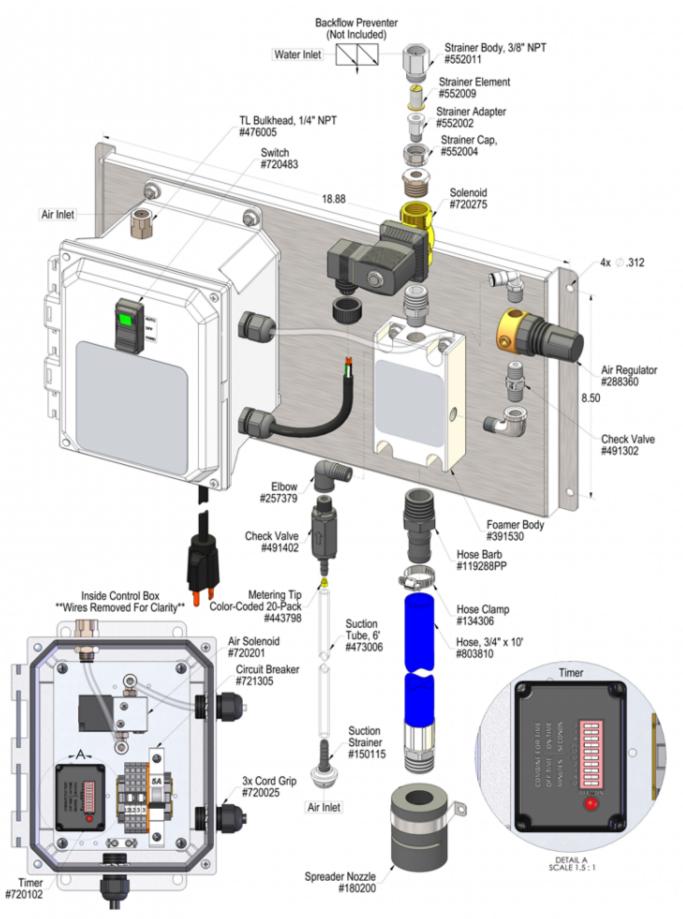

Troubleshooting Guide

AF 976500 ● Timed Entryway Foam Sanitizer

Post Line	Possible Cause / Solution			
Problem	Startup	Maintenance		
B) Foam surges. C) Foam output too wet. D) Foam output too dry. E) Doesn't come on when switch is turned on. F) Comes on and runs continuously.	1, 7, 8, 9, 10 1, 2, 3, 4, 6, 7, 8, 9, 10 2, 3, 4, 6, 7, 8, 9, 10 1, 5 11,12 11	13, 14, 15, 16, 17, 19, 20 13, 14, 15, 16, 17, 19, 20 13, 14, 15, 16, 17, 18, 19, 20 17		
Possible Cause / Solution				
Startup	Maintenance			
 Air pressure too high Adjust air regulator slowly counterclockwise until output stabilizes. Air adjustment too low Adjust air regulator very slowly clockwise. Use of an oiler in the airline will cause poor foam quality Use only clean, dry air. Not enough chemical - metering tip too small Install larger metering tip. No metering tip installed or metering tip too large 	 13. Chemical check valve stuck or failed Clean or replace. 14. Chemical strainer or metering tip partially blocked Clean or replace chemical strainer and/or metering tip. 15. Chemical tube stretched out where tube slides over check valve or pin hole/cut in chemical tube (sucking air in) Cut off end of tube or replace tube. 16. Vacuum leak in chemical pick-up connections Tighten the connections. 			

- o Install smaller metering tip. 6. Improper chemical
 - o Ensure product is recommended for foaming and/or the application.
- 7. Chemical tube not immersed in chemical or chemical depleted o Immerse tube or replenish
- 8. Foam hose kinked or hose/plumbing too short or wrong size • (See REQUIREMENTS on page 1)
- 9. Water pressure too low or water volume too low/inlet piping too small
 - Increase water pressure or water volume. (See REQUIREMENTS
- 10. No water to the unit
 - o Ensure that the water supply is not shut off to the unit.
- 11. Timer failed/Controller not set properly or malfunctioned
 - o Replace timer. See Controller manual.

Printed: Thursday Jun 26th 2014

- 12. May have electrical problems
 - o Ensure circuit breaker (5 Amp) has not been tripped.
 - o Have a qualified electrician check electrical connections.

- 17. Air regulator failed allowing too much air or not enough air
 - o Clean or replace.
- 18. Air check valve or air solenoid clogged or failed
 - o Clean or replace.
- 19. Water solenoid clogged or failed
 - o Clean or replace the water solenoid.
- 20. Chemical build-up may have formed in the body, causing poor or no
 - Follow PREVENTIVE MAINTENANCE instructions below, using hot water or descaling acid. When there is no draw at all, carefully remove fittings and soak entire body in descaling acid.
- 21. No backflow preventer installed
 - o Install appropriate backflow preventer into water line.

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

