AFCO Installation & Operation Instructions

Model #AF 918227 •W-20SS Sanitize / Rinse / HPSS Foam Hose Drop Station

REQUIREMENTS

Chemical Concentrate

Temperature	up to 180°F
Pressure	400 - 1000 PS
Flow	8.4 GPM @ 700 PS
Supply Line	3/8'
Compressed Air	up to 5 CFM
Hose	
Sanitize	3/8" x 50

Nozzla

Rinse

Foam

Nozzie	
Sanitize	2520
Rinse	2520
Foam	50250

3/8" x 50'

1/2" x 50'

OPTIONS

Large Stainless Steel Hose Rack	# 224150
Stainless Steel Jug Racks Available Optional Zero Degree Foam Nozzle (I Increased Range) Nozzle, NPB, 1/2" - 00250	For # 180153
Alternate Check Valve - EPDM Standa	ard
Check Valve, Chemical, SS, Viton, 1/4"	# 491324-V
Alternate Check Valves - EPDM Stand	lard
Check Valve, Chemical, PP/Viton, 1/4"	# 491315
Check Valve, Air, SS/Viton, 1/4"	# 491306

WEIGHT & DIMENSIONS

Shipping Weight: 44 lbs.

Shipping Dimensions: 28" x 28" x 8"





READ ALL
INSTRUCTIONS BEFORE
USING EQUIPMENT!



Overview

The W-20SS Sanitize / Rinse / HPSS Foam Hose Drop Station is a combination applicator for applying one chemical as foam at 2 GPM @ 700 PSI, another as a sanitizing spray, and for rinsing. This stainless steel venturi injection system uses high water pressure (400 - 1000 PSI) to draw and blend chemical concentrates into the water streams to create accurately diluted solutions using precision metering tips to control chemical usage. Rich, clinging foam is created by injecting compressed air into the foaming solution to greatly increase volume and coverage ability. The foaming solution then flows through the foam hose and is projected through the fan nozzle at distances up to 13 feet. Rinse and sanitize using the second hose, trigger gun, and fan nozzle.



Safety & Operational Precautions

- For proper performance do NOT modify, substitute nozzle, hose diameter or length.
- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear protective clothing, gloves and eye wear when working with chemicals.
- Always direct the discharge away from people and electrical devices.
- Follow the chemical manufacturer's safe handling instructions.
- Do not put a discharge ball valve on this unit or kink the hose to stop the flow of foam.

TO INSTALL (REFER TO DIAGRAM, NEXT PAGE.)

- 1. Mount the unit to a suitable surface above the chemical supply to prevent siphoning.
- 2. Attach the foam hose assembly as shown in the drawing.
- 3. Quick connect the high pressure discharge hose to the rinse plug and close the inlet ball valves. This hose and gun is used for both rinse and sanitize
- 4. Connect water supply. Flush any new plumbing of debris before connecting.
- 5. Connect compressed air. If piping is older and has known contaminants, install a filter.

Set the chemical dilution ratio by threading one of the color coded metering tips into each chemical check valve. See chemical labels for dilution ratio recommendation or consult your chemical supplier.

- For the strongest dilution ratio do NOT install a colored metering tip.
- The dilution ratios in the metering tip chart are based on water thin chemicals with a viscosity of 1CPS.
- Thicker chemicals will require a larger tip than the ratios shown in the chart.
- Application results will ultimately determine final tip color.
- Select the tip color that is closest to your desired chemical strength and thread it into the tip holder. DO NOT OVER TIGHTEN
- Push the chemical tube over the check valve barb and place the strainer in the chemical concentrate.

TO FOAM

Always make sure the wand is in hand and pointed in a safe direction before turning water and air on. DO NOT kink the hose to stop foam flow, return to the unit and close the water and air ball valves

- 1. Final chemical dilution and air adjustments will now have to be made.
- 2. With wand in hand open the water ball valve, and the air ball valve.
 - Wait a few seconds and observe foam consistency.
 - To adjust the foam consistency turn the needle valve knob slightly counterclockwise for dryer foam and clockwise for wetter foam.
 - o Medium wet foam will give the best cleaning results! Very dry foam will NOT clean as well!
 - You may also have to try different sized metering tips and air settings until foam consistency and cleaning results are acceptable. Once this is set you are ready to start application.
- When foaming is completed return to the unit and close the water and air ball valves. Do NOT kink the hose to stop foam flow. Rinse the work surface before foam dries.

TO RINSE

TO SANITIZE

- 1. Pull the trigger to relieve pressure in hose.
- 2. Securely quick connect the hose to the quick disconnect discharge plug.
- 3. Open the inlet ball valve then pull the trigger to begin rinsing.
- 4. When application is completed, release trigger and return to the unit and close the inlet ball valve. Pull the trigger to relieve pressure in hose.

to relieve pressure in hose.

- 1. Make final metering tip adjustments based on application results.
- 2. Pull the trigger to relieve pressure in hose.
- 3. Securely quick connect the hose to the quick disconnect discharge plug.
- 4. Open the inlet ball valve then pull the trigger to begin application.
- 5. When application is completed, release trigger and return to the unit and close the inlet ball valve. Pull the trigger to relieve pressure in hose.
- 6. Rinse the work surface, if applicable.


Metering Tip So				
Metering Oz	. per	xample	: Dilutio 700 PS	
Tip Color N	in.	anitize		Foam
Brown	.56	711:1	KIIISE	454:1
Clear	.88	452:1	_	289:1
Bright Purple	1.38	288:1	_	184:1
White	2.15	185:1	_	118:1
Pink	2.93	136:1	_	87:1
Corn Yellow	3.84	104:1	_	66:1
Dark Green	4.88	82:1	_	52:1
Orange	5.77	69:1	_	44:1
Gray	6.01	66:1	_	42:1
Light Green	7.01	57:1	_	36:1
Med. Green	8.06	49:1	_	32:1
Clear Pink	9.43	42:1	_	27:1
Yellow Green	11.50	35:1	_	22:1
Burgundy	11.93	33:1	_	21:1
Pale Pink	13.87	29:1	_	18:1
Light Blue	15.14	26:1	_	17:1
Dark Purple	17.88	22:1	_	14:1
Navy Blue	25.36	16:1	_	10:1
Clear Aqua	28.60	14:1	_	9:1
Black	50.00	8:1	_	_
No Tip Ratio Up	То:	7.0:1	_	6.0:1

The dilution ratios above are approximate values. Due to chemical viscosity, actual dilution ratios may vary.

Metering Tip Selection Formula

(GPM x 128) / Dilution Ratio = Oz. per Min

Flow Rate Chart				
Pressure	Water Flow GPM			
PSI	Sanitize	Rinse	Foam	
400	2.35	6.32	1.50	
500	2.63	7.07	1.68	
600	2.88	7.74	1.84	
700	3.11	8.36	1.98	
800	3.32	8.94	2.12	
900	3.53	9.48	2.25	
1000	3.72	9.99	2.37	

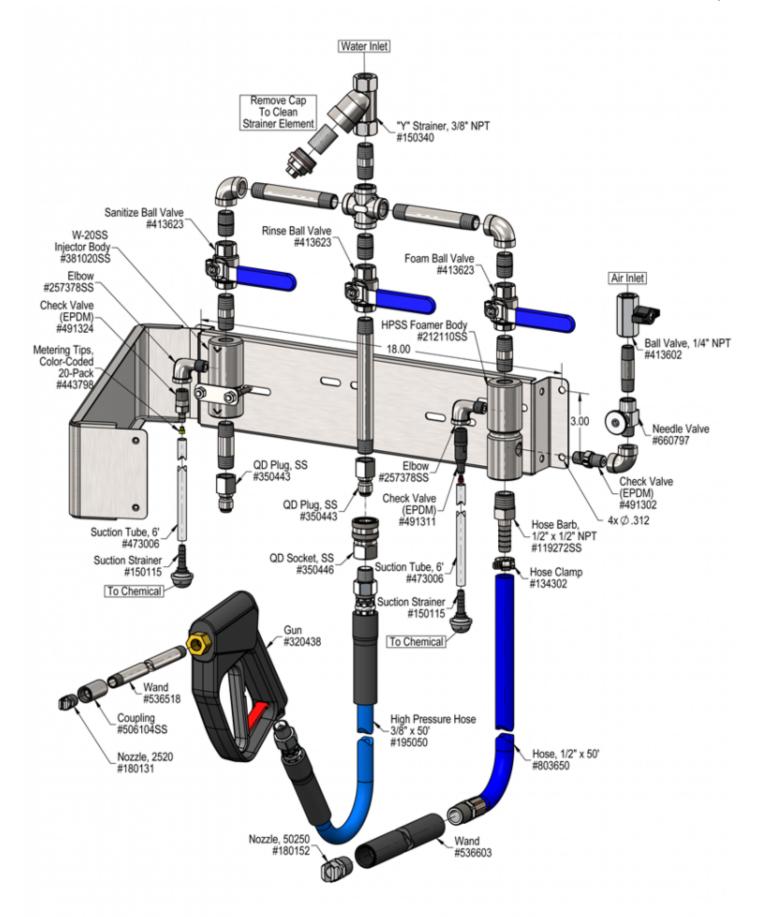

Troubleshooting Guide

AF 918227 • W-20SS Sanitize / Rinse / HPSS Foam Hose Drop Station

- 11 - 21 -	Possible Cause / Solution			
Problems with Foamer	Startup Ma	aintenance		
B) Foamer will not draw chemical. C) Foam too wet. D) Foam does not clean properly.	1, 3, 4, 7, 8, 9, 10	3, 14, 15, 16, 18, 19 3, 14, 15, 18, 19 4, 15, 16, 18, 19		
Problems with Sanitizer/Sprayer	Possible Cause Startup Ma	/ Solution aintenance		
•		14, 15, 18, 19		
Possible Cause / Solution				
Startup	Mainten	ance		
 Air volume too high Turn the air needle valve knob slowly clockwise until output stabilizes. Use of an oiler in the airline will cause poor foam quality Use only clean, dry air. Inlet ball valve ball valve not completely open Completely open the inlet ball valve. Not enough chemical - metering tip too small Install larger metering tip. No metering tip installed or metering tip too large Install smaller metering tip. 	 12. Chemical check valve stuck or fail Clean or replace. 13. Chemical strainer or metering tip post of the comment of	partially blocked trainer and/or metering tip. n hole / cut in tube te tube. connections		

6. Improper chemical

- o Ensure product is recommended for foaming and/or the
- 7. Chemical tube not immersed or chemical depleted
 - o Immerse tube or replenish.
- 8. Discharge hose too long or wrong size or kinked
 - o Straighten the hose Replace hose with correct size.
- 9. Nozzle size too small
 - Replace nozzle with correct size.
- 10. Water pressure or volume too low / inlet piping too small
 - o Increase water pressure or water volume.
- 11. Soil has hardened on surface; rinse foam before it dries

Printed: Thursday Jun 26th 2014

o Reapplication may be necessary.

- 17. Air check valve failed
 - o Replace.
- 18. Water strainer element clogged or foamer/sanitizer inlet orifice clogged
 - o Clean or replace strainer element. Check / clean inlet orifice for obstructions. DO NOT DRILL OUT.
- 19. Chemical build-up may have formed in the foamer / injector body causing poor or no chemical pick-up
 - o Follow Preventive Maintenance instructions below, using hot water and / or descaling acid. When there is no draw at all carefully remove fittings and soak entire foamer / injector body in descaling acid.

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods, place chemical tube(s) in water and flush the chemical out of the unit to help prevent chemical from drying out and causing build-up. Periodically check and clean chemical strainer and replace if missing.

