

AFCO Installation & Operation Instructions

Model #AF 976725 • Vision Satellite PF Entryway MV Foam Sanitizer

REQUIREMENTS

Ready-to-Use Chemical Solution (Minimum 35 PSI at the Unit)

Temperature	up to 160°F
Pressure	35 - 75 PSI
Flow	2.45 GPM @ 40 PSI
Supply Line	1/2"

Compressed Air up to 3 CFM

Hose 1" x 25'

Nozzle MV Entryway Spreader

OPTIONS

Regulate the Operation of Multiple Vision Satellite Entryway Foam Sanitizers

3-Zone PLC Vision Satellite Controller	# 976705
6-Zone PLC Vision Satellite Controller	# 976710

Central Air Pump Systems

Mini-Central System Air Pump System	# 919050
Central System Air Pump System	# 919060


High Flow Level Masters Provide an Automatic Supply of Ready-to-Use Chemical

60/10 High Flow Level Master	# 989106
60/20 High Flow Level Master	# 989108

WEIGHT & DIMENSIONS

Shipping Weight: 17 lbs.

Shipping Dimensions: 22" x 19" x 9"

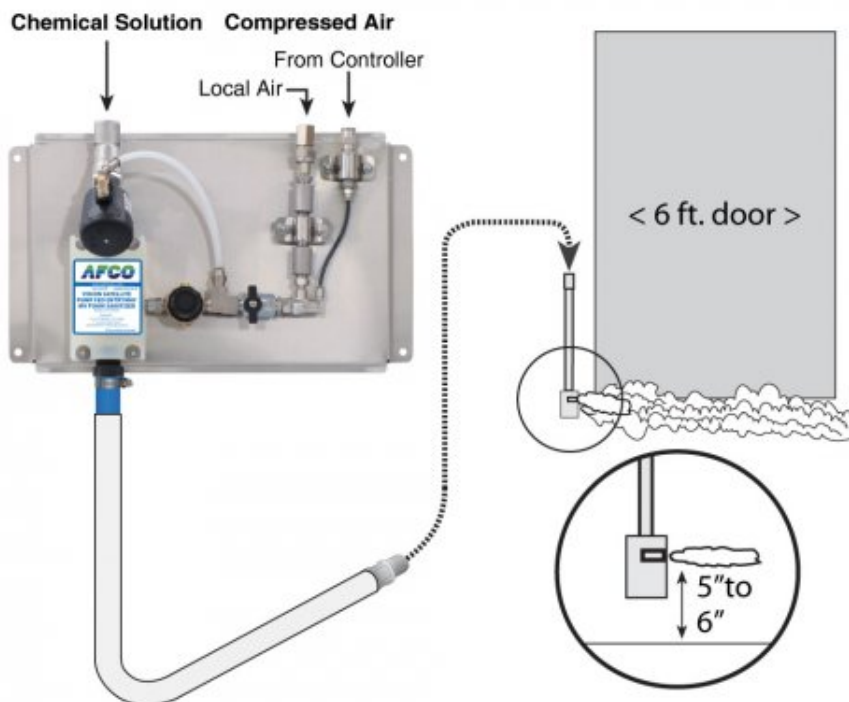

<http://www.afcocare.com>

**READ ALL
INSTRUCTIONS BEFORE
USING EQUIPMENT!**

Overview

The Pump Fed Vision Satellite Entryway MV Foam Sanitizer is an automated foam applicator for projecting sanitizing chemicals on to floors of 6' wide double doors to prevent cross contamination. When activated, this system is fed with RTU chemical solution from a central chemical feed system. Rich, clinging foam is created by injecting compressed air into the solution to greatly increase volume and coverage ability. Foam is then projected through the discharge hose and MV Spreader™ nozzle. Vision Satellite units are activated by compressed air from the Vision Controller and operated by compressed air local to the satellite - no electrical connection is required at the entryway location. The Vision Controller features highly flexible programmable settings with multiple options to precisely manage the foam sanitizing of up to six zones of multiple doorways with independent settings for each zone.



Safety & Operational Precautions

- For proper performance do NOT modify, substitute nozzle, hose diameter or length.
- Manufacturer assumes no liability for the use or misuse of this unit.
- Wear protective clothing, gloves and eye-wear when working with chemicals.
- Always direct the discharge away from people and electrical devices.
- For pressures over 100 PSI, remove the discharge valve or lower pressure
- Follow the chemical manufacturer's safe handling instructions.
- Turn off solution supply and air when unit is not in use for extended periods.

TO INSTALL (REFER TO DIAGRAM, NEXT PAGE.)

Note: An independent 3/8" compressed air supply line should be installed, starting from a central Lafferty Vision Controller and extending to each area where a Vision Satellite will be installed.

1. Mount the unit to a suitable surface near the entryway.
2. See Page 1 for proper installation layout.
3. Connect the section of 1" hose to the foamer and any 1" pipe you installed.
4. For proper performance, a minimum of 25' discharge hose/pipe is required. Use as few elbows as possible.
5. Mount the spreader nozzle slot at 5-6" off the floor.
6. Connect local compressed air supply to the unit.
7. Connect air supply line from the central Lafferty Vision Controller to the unit.
8. Close air ball valve
9. Connect chemical solution supply line to the unit. A solution check valve is recommended.

TO OPERATE

Testing & Adjustment

The Vision Satellite Entryway Foam Sanitizer is equipped with an air ball valve. While testing and adjusting the unit, or in case of an emergency, the unit can be shut off by closing the air ball valve completely. The unit will not operate when the air ball valve is closed, regardless of Vision Controller settings. **Do not use the air ball valve to control air flow.** This ball valve must be fully open for the unit to operate correctly.


Recommended Testing Procedure — You can temporarily, directly connect a separate compressed air supply to the unit. In this case you would need to connect the air supply to both the local air inlet port and the air inlet from the Vision Controller port.

1. Final adjustments will now have to be made.
2. Open the air ball valve completely to activate the unit.
3. Wait a few seconds and observe foam consistency.
 - Use the least amount of air needed to achieve good foam quality to prevent solution pressure fluctuations from affecting performance. Air pressure must be kept lower than solution pressure.
 - To adjust foam consistency pull out on the air regulator knob, turn slightly clockwise for dryer foam and counterclockwise for wetter foam. Wait a few seconds to see each adjustment.

Testing Procedure when unit is connected to a Vision Controller:

1. Follow page 4 of the separate Vision Controller instructions to select the Zone for this Satellite unit, then set the Zone to Manual Operation for several minutes. Turn off air to any additional satellite units that are connected to the same Zone. Follow steps 2 and 3 under Recommended Testing Procedure, above.
2. When testing is complete, close the air ball valve at the unit. Follow the Controller instruction manual to re-set the Controller for standard operation.
3. Re-open the air ball valve at all units to allow activation by the Vision Controller.

Flow Rate Chart	
Pressure	Flow Rate
PSI	GPM
40	2.45
50	2.74
60	3.00
70	3.24
80	3.46
90	3.68
100	3.87
110	4.06
120	4.24

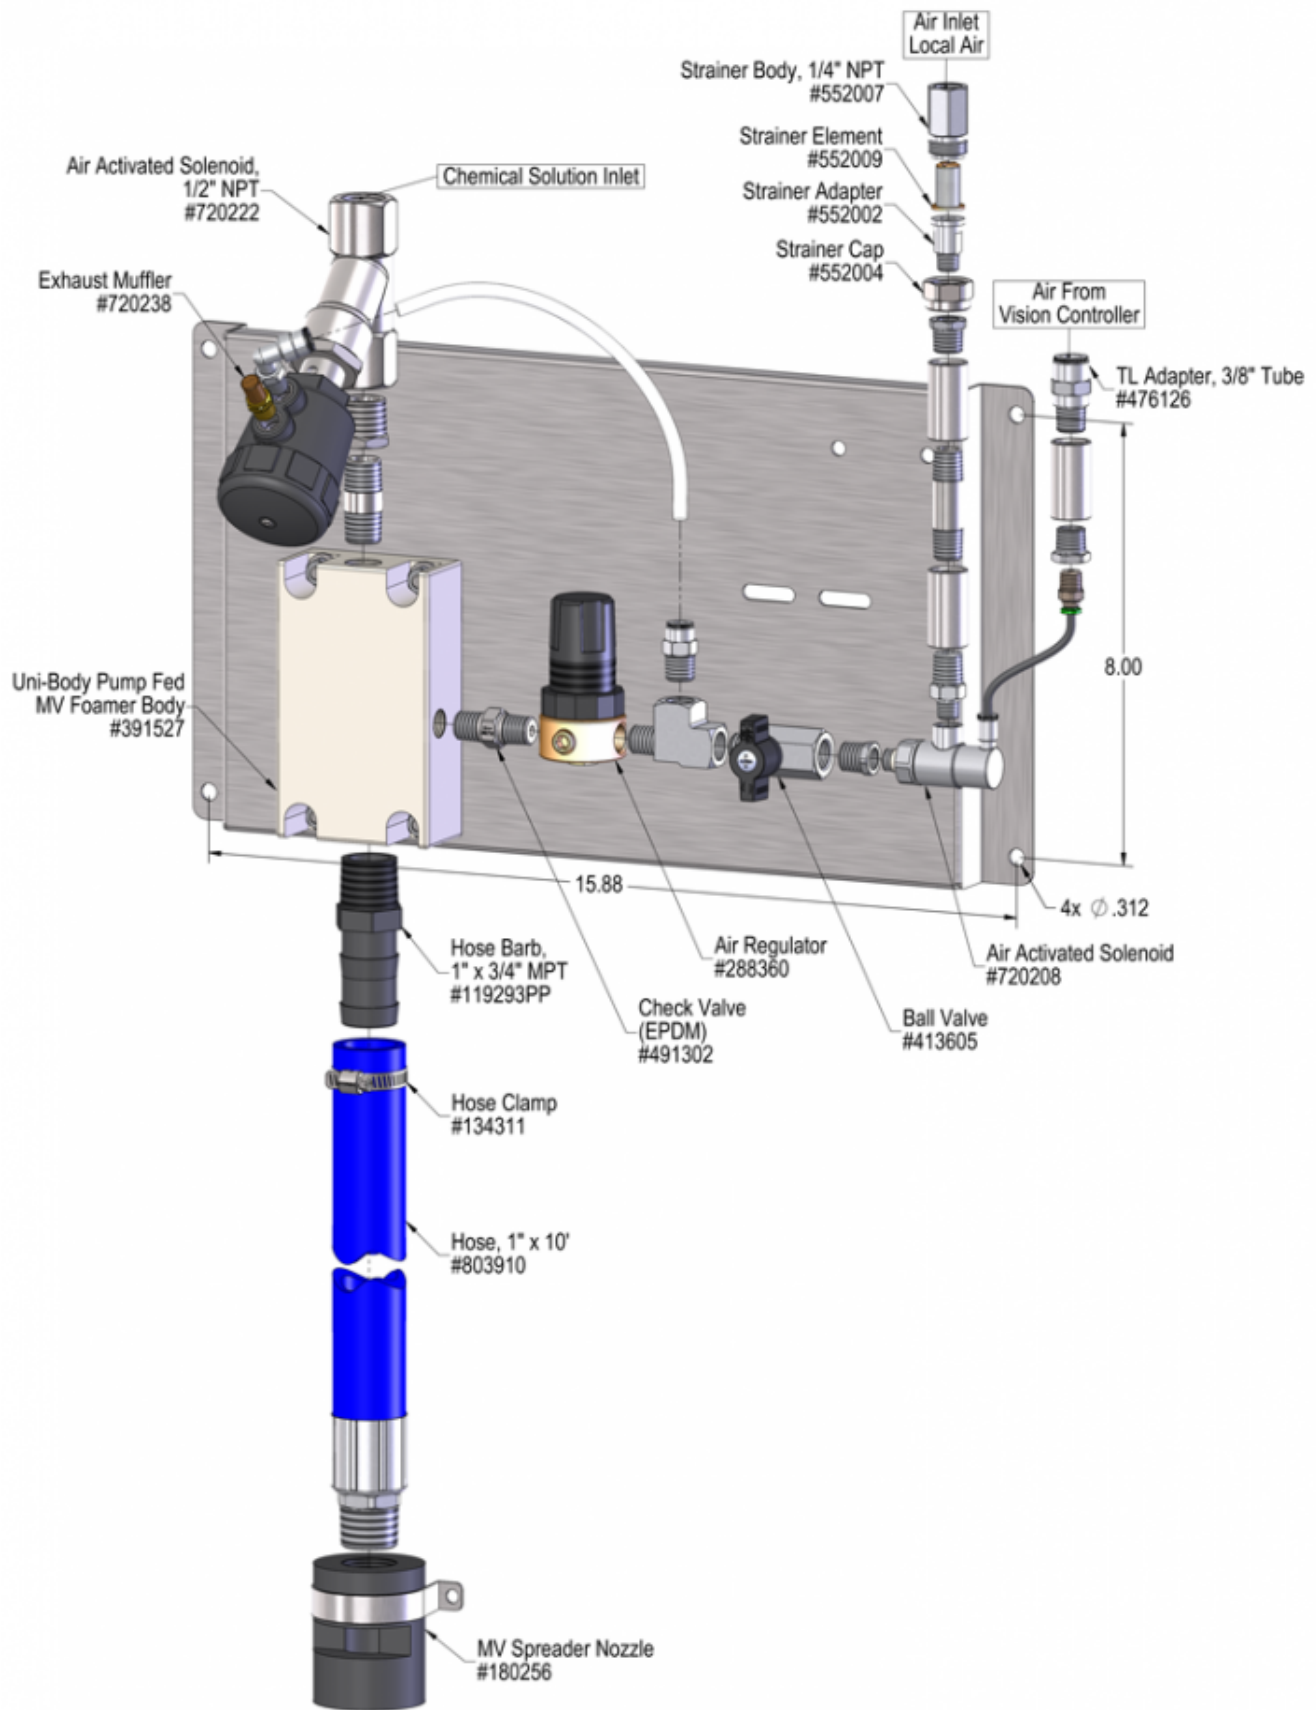

Troubleshooting Guide

AF 976725 • Vision Satellite PF Entryway MV Foam Sanitizer

Problem	Possible Cause / Solution	
	Startup	Maintenance
A) Foam surges.	1, 2, 3, 4, 6, 7, 8, 9, 10, 11	13, 15, 16
B) Foam output too wet.	2, 3, 4, 6, 7, 8, 9, 10, 11	13, 14, 15, 16
C) Foam output too dry.	1, 5	13, 14
D) Unit doesn't come on when switch is turned on.	11, 12	
E) Unit comes on and runs continuously.	11	
F) Unit comes on but no solution through solenoid.	12	15

Possible Cause / Solution	
Startup	Maintenance
<ol style="list-style-type: none"> 1. Air pressure too high <ul style="list-style-type: none"> ◦ Adjust air regulator slowly counterclockwise until output stabilizes. 2. Air adjustment too low <ul style="list-style-type: none"> ◦ Adjust air regulator very slowly clockwise. 3. Use of an oiler in the airline will cause poor foam quality <ul style="list-style-type: none"> ◦ Use only clean, dry air. 4. Not enough chemical <ul style="list-style-type: none"> ◦ Increase chemical concentration. 5. Too much chemical <ul style="list-style-type: none"> ◦ Decrease chemical concentration. 6. Improper chemical <ul style="list-style-type: none"> ◦ Ensure product is recommended for foaming and/or the application. 7. Foam hose kinked or hose/plumbing too long or wrong size (See REQUIREMENTS) <ul style="list-style-type: none"> ◦ Straighten the hose. 8. Nozzle size too small (See REQUIREMENTS) 9. Chemical solution pressure too low or volume too low / inlet piping too small <ul style="list-style-type: none"> ◦ Increase solution pressure or volume (See REQUIREMENTS). 10. No chemical solution to the unit <ul style="list-style-type: none"> ◦ Ensure that the chemical solution supply is not shut off to the unit. 11. Timer failed/Controller not set properly or malfunctioned <ul style="list-style-type: none"> ◦ Replace timer. See Controller manual. 12. May have electrical problems <ul style="list-style-type: none"> ◦ Have a qualified electrician check electrical connections. Ensure circuit breaker (5 amp) has not been tripped at control box. 	<ol style="list-style-type: none"> 13. Air regulator failed allowing too much air or not enough air <ul style="list-style-type: none"> ◦ Clean or replace. 14. Air check valve or air solenoid clogged or failed <ul style="list-style-type: none"> ◦ Clean or replace. 15. Chemical solution solenoid clogged or failed <ul style="list-style-type: none"> ◦ Clean or replace. 16. Chemical build-up may have formed in the body, causing poor or no chemical pick-up <ul style="list-style-type: none"> ◦ Follow PREVENTIVE MAINTENANCE instructions below, using water. In extreme cases, carefully remove fittings and soak entire body in descaling acid.

PREVENTIVE MAINTENANCE: When the unit will be out of service for extended periods run water through the system to flush the chemical and help prevent chemical build-up.

